




LG Optimus L9 P769 Front Speaker Replacement

This guide will allow you to remove the front speaker if it malfunctions or becomes inoperable.


Written By: Paul

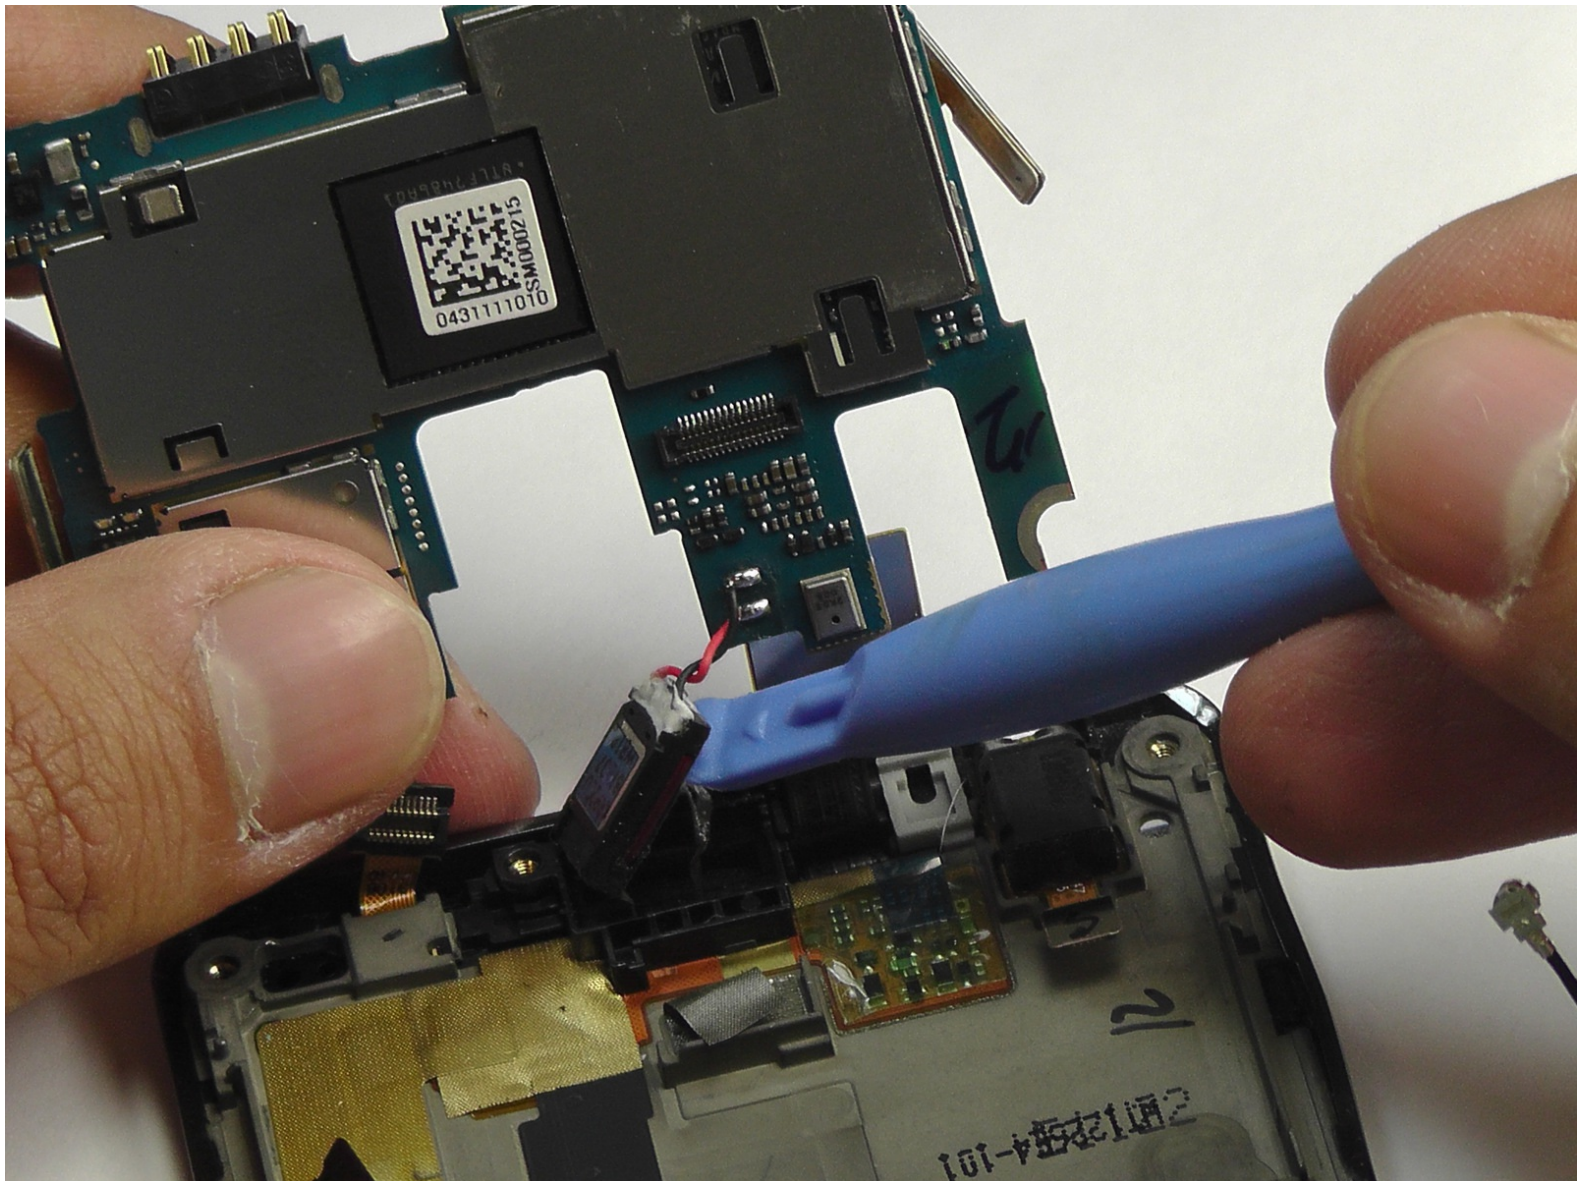

INTRODUCTION


In order to complete this guide you must have lifted the motherboard from the phone.

Step 1 — Front Speaker

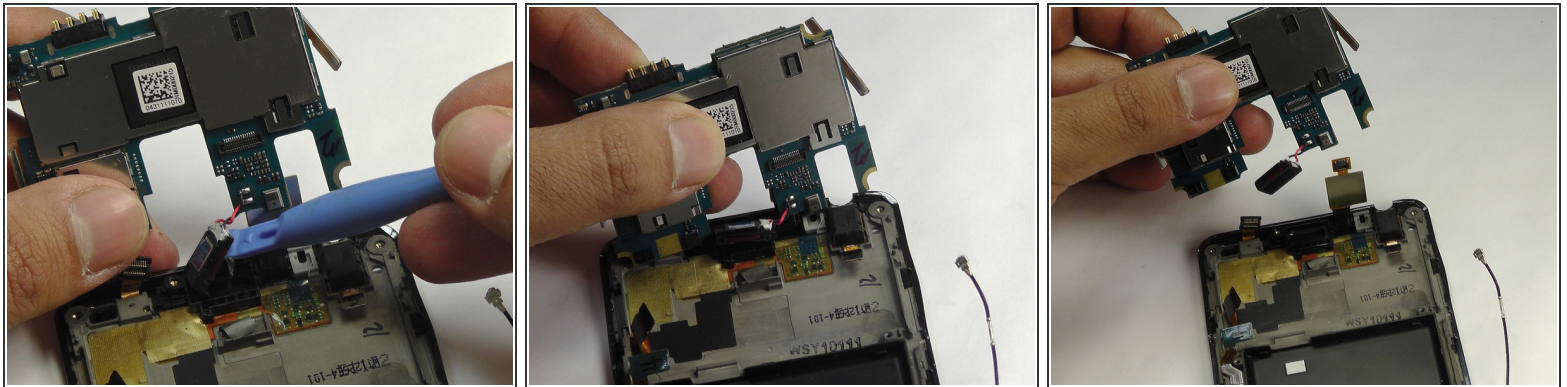

- Pry the storage unit off until it comes loose and the motherboard can be lifted from the frame.

Step 2 — Remove the Front Speaker

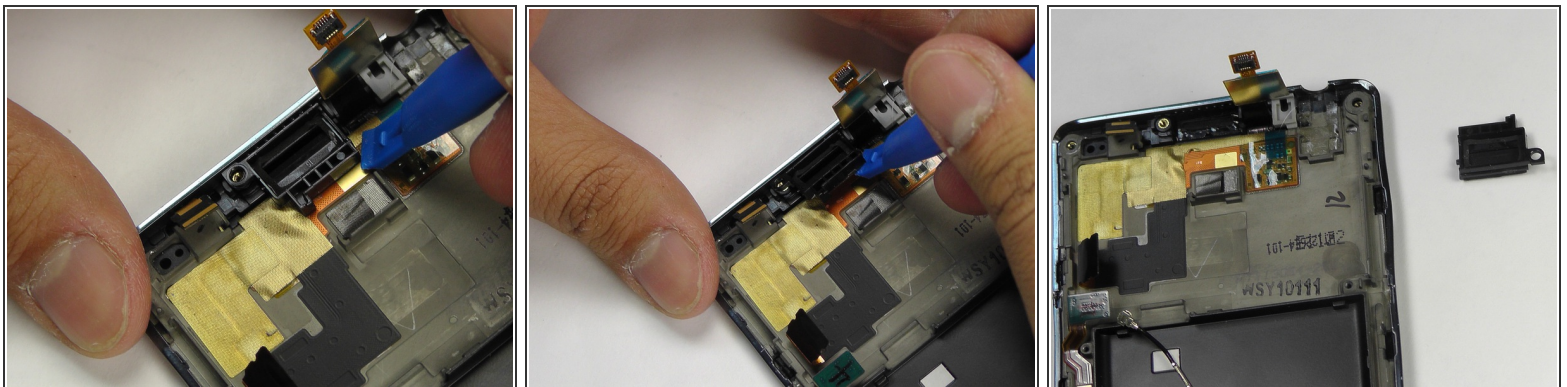

- Pry the front speaker from the frame until it becomes loose enough to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 08:21:58 PM.